

## TUBELESS TIRES

This motorcycle is equipped with tubeless type tires, valves, and wheel rims. Use only tires marked "TUBELESS" and tubeless valves on rims marked "TUBELESS TIRE APPLICABLE."

Proper air pressure will provide maximum stability, riding comfort and tire life.

Check tire pressures frequently and adjust if necessary (page 2).

### NOTE:

- \* Tire pressure should be checked when the tires are "cold," before you ride.
- \* Tubeless tires have some degree of self-sealing ability if they are punctured, and leakage is often very slow. Inspect very closely for punctures, especially if the tire is not fully inflated.

Check the tires for cuts, imbedded nails or other sharp objects. Check the rims for dents or deformation. If there is any damage, see your authorized Honda dealer for repair, replacement, and balancing.

### WARNING

- \* *Improper tire inflation will cause abnormal tread wear and create a safety hazard. Underinflation may result in the tire slipping on, or coming off of the rim.*
- \* *Operation with excessively worn tires is hazardous and will adversely affect traction and handling.*

Replace tires before tread depth at the center of the tire reaches the limit as shown on the tire information label (page 2).

### Repair:

Puncture of tubeless tires may be fixed externally for emergency. See your authorized Honda Dealer for the correct method before you encounter actual failure on the road.