

## ENGINE STOP SWITCH

The engine stop switch (1) is next to the throttle grip. In the RUN position, the engine will operate. In the OFF position the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in RUN.

### NOTE:


- \* If your motorcycle is stopped with the ignition switch ON and the engine stop switch OFF, the headlight and taillight will still be on, resulting in battery discharge.

## STARTER BUTTON

The starter button (2) is below the engine stop switch (1).

When the starter button is pressed the starter motor will crank the engine, the headlight will automatically go out, but the taillight will stay on.

See pages 35—37 for starting procedure.

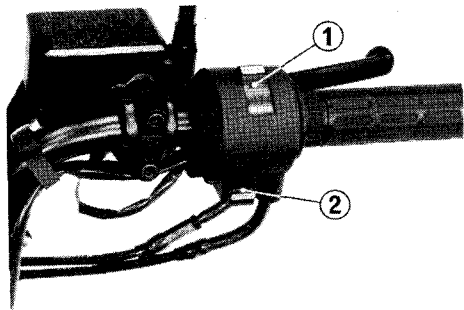

- (1) Engine stop switch
- (2) Starter button