


AIR CLEANERS


The air cleaners should be serviced at regular intervals (page 44). When riding in dusty areas, more frequent service may be necessary.

1. Remove the seat.
2. Remove the four screws (1) and air cleaner cover (2).
3. Pull out and discard the air cleaner element (3).

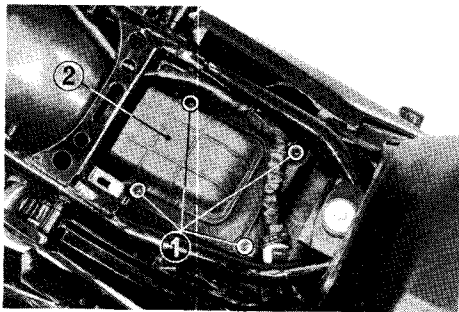

- (1) Screws
- (2) Air cleaner cover

4. Install the new element.
5. Install the air cleaner cover (2) and tighten the four screws (1) securely.
6. Install the seat.

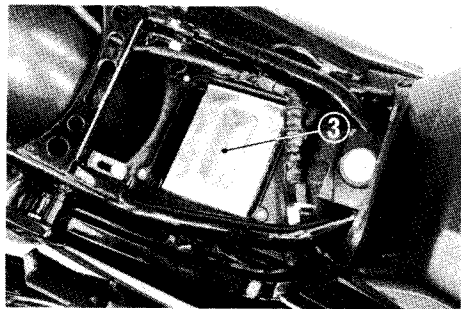

(3) Air cleaner element