


To replace fuses in the fuse box (4), remove the screws and the fuse box cover. Pull the old fuse out of the clips; slide it lengthwise until one end comes out, then lift it out with your fingers. Push a new fuse into the clips and install the fuse box cover.


**WARNING**

- \* *Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power at night or in traffic.*
- \* *Do not pry the clips open to get a fuse out; you could bend them and cause poor contact with the new fuse. A loose fuse could cause damage to the electrical system and even start a fire.*

**REMOVAL**

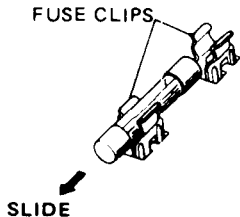

**REMOVE**

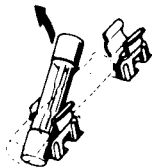

**INSTALLATION**

