| (Ref.No.) Description         | Function  |
|-------------------------------|---|
| (5) Fuel indicator            | Lights when there is only few fuel left in the fuel tank. The amount of fuel left in the tank when lights and with the vehicle set upright is approximately:  3.5 & (0.92 US gal, 0.77 Imp gal)             |
| (6) Tachometer                | Shows engine revolutions per minute.  |
| (7) Tachometer red zone       | Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.  NOTICE  Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red |
|                               | zone) can damage the engine.  |
| (8) Coolant temperature gauge | Shows coolant temperature (page 16 ).   |