

(Ref.No.) Description	Function
(1) Speedometer	<p>Shows riding speed.</p> <p>This shows your speed in kilometers per hour (km/h) and/or miles per hour (mph) depending on the type.</p> <p>The speedometer needle will swing to the maximum scale on the dial once when the ignition switch is turned ON.</p>
(2) Neutral indicator (green)	Lights when the transmission is in neutral.
(3) High beam indicator (blue)	Lights when the headlight is on high beam.