


### Fuel level indicator (1)

When the indicator needle enters the red zone (2), the fuel level is low and the tank should be refilled as soon as possible.

When the indicator needle enters the red reserve zone while keeping the motorcycle in the upright position, the available fuel quantity is about 4.0 litres.

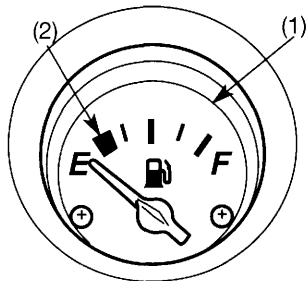

(1) Fuel level indicator

(2) Red zone