

MAJOR COMPONENTS (Information you need to operate this motorcycle)

SUSPENSION

The rear shock absorber (1) has 7 adjustment positions for different load or riding conditions.


Use a pin spanner (2) and extension bar (3) to adjust the rear shock.

Position 1 and 2 are for light loads and smooth road conditions. Positions 4 to 7 increase spring preload for a stiffer rear suspension, and can be used when the motorcycle is heavily loaded.

Standard position: 3

The rear shock absorber assembly includes a damper unit that contains high pressure nitrogen gas. Do not attempt to disassemble or service the damper; it cannot be rebuilt and must be replaced when worn out. Disposal should only be done by your Honda dealer.

The instructions found in this owner's manual are limited to adjustment of the shock assembly only.

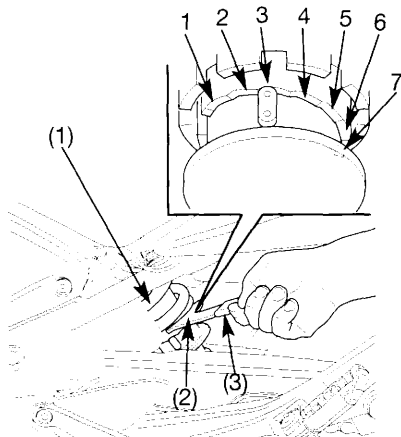

- (1) Shock absorber
- (2) Pin spanner
- (3) Extension bar