



## MAJOR COMPONENTS (Information you need to operate this motorcycle)

### **▲WARNING**

**\* If the Pre-ride Inspection (page 42) is not performed, severe personal injury or vehicle damage may result.**

### **BRAKES**

#### **Front Brake**

This motorcycle has a hydraulic front disc brake.

As the brake pads wear, brake fluid level drops.

There are no adjustments to perform, but fluid level and pad wear must be inspected periodically. The system must be inspected frequently to ensure there are no fluid leaks. If the control lever free travel becomes excessive and the brake pads are not worn beyond the recommended limit (page 81), there is probably air in the brake system and it must be bled. See your Honda dealer for this service.

