



SIDE COVER


The left side cover must be removed for battery and fuse maintenance.
The right and left side covers can be removed in the same manner.

Removal:

1. Remove the seat (page 38).
2. Remove the screws (1).
3. Pull out the hook (2) from the grommet (3).

Installation:

- Installation can be done in the reverse order of removal.

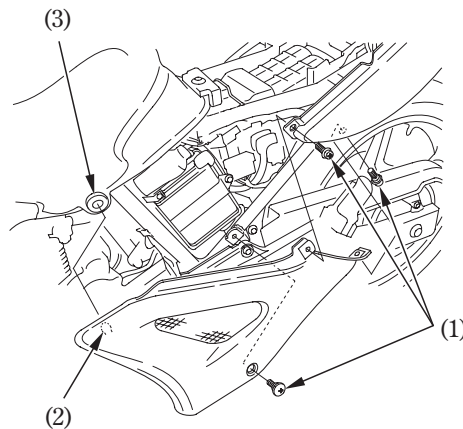

(1) Screws
(2) Hook

(3) Grommet

