



Installation Notes:

- To install the front wheel assembly, install the brake disc between the brake pads taking care not to damage the brake pads and insert the axle through the left fork leg.
- Make sure that the lug (5) on the fork leg is contacting the lug (6) on the speedometer gear box. Tighten the front axle bolt and axle pinch bolts to specified torques.

Front axle bolt torque:

59 N·m (6.0 kgf·m , 44 lbf·ft)


Axle pinch bolts torque:

22 N·m (2.2 kgf·m , 16 lbf·ft)

- After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

▲WARNING

*** If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

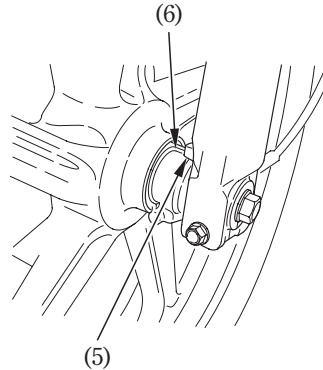

(5) Lug

(6) Lug

