




### Headlight Bulb

1. Remove the two screws (1) from the headlight case.
2. Gently pull the lower end of the headlight (2) forward and remove the headlight.
3. Disconnect the connectors (3).
4. Remove the seat rubber (4).
5. Remove the headlight bulb (5) while pressing down on the pin (6).


6. Install a new bulb in the reverse order of removal.
  - Install the dust cover with its "TOP" mark facing up.

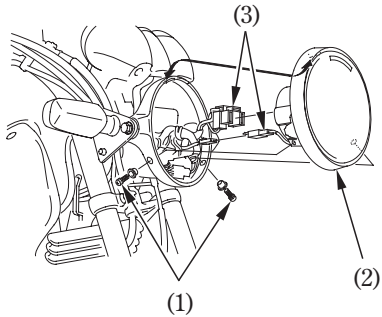

- (1) Screws  
(2) Headlight

(3) Connectors

90

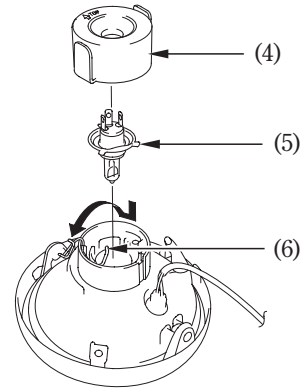

- (4) Seat rubber  
(5) Headlight bulb  
(6) Pin

