



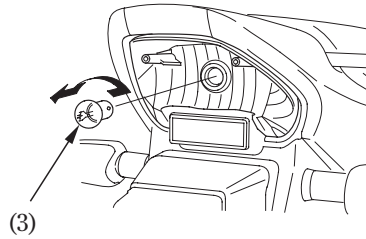

Stop/Taillight Bulb

1. Remove the taillight lens (1) by removing the two screws (2).

2. Slightly press the bulb (3) and turn it counterclockwise.
3. Install a new bulb in the reverse order of removal.

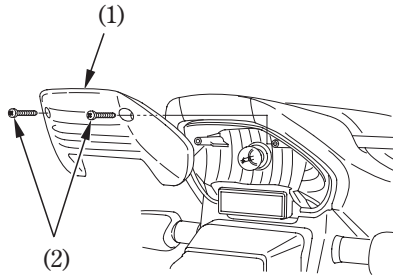

(1) Taillight lens

(2) Screws

(3) Bulb

