

Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Press and hold both the HOUR (1) and MINUTE (2) button for more than 2 seconds. The clock will be set in the adjust mode with the display flashing.
3. To set the hour, press and release the HOUR button until the desired hour and AM/PM setting are displayed.

- The time is advanced by one hour, each time the button is pushed.
- The time advances fast when the button is pushed and held.


4. To set the minute, press and release the MINUTE button until the desired minute is displayed.

The minute display will return to "00" when "60" is reached without affecting the hour display.

- The time is advanced by one minute, each time the button is pushed.
- The time advances fast when the button is pushed and held.

5. To end the adjustment, press the RESET (3) button or turn the ignition switch OFF.

The clock will be reset AM 1:00 if the battery is disconnected.

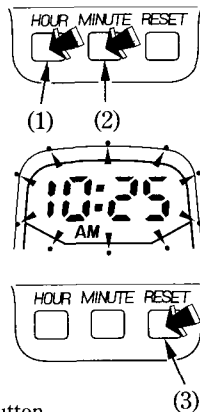

- (1) HOUR button
- (2) MINUTE button
- (3) RESET button