

(Ref. Nr.) Description	Function
(1) Speedometer	Shows riding speed. Shows the speed in kilometers per hour (km/h) and/or miles per hour (mph) depending on the model.
(2) High beam indicator (blue) - Low oil pressure indicator (red)	Lights when the headlight is on high beam. Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm. NOTICE Running the engine with insufficient oil pressure may cause serious engine damage.
- Neutral indicator (green)	Lights when the transmission is in neutral.
- Fuel indicator (orange)	Lights when the fuel level is low .Amount of fuel left in the tank is approximately: 3.5 liters.