


## CRANKCASE BREATHER

Refer to the Safety Precautions on page 64.

1. Remove the crankcase exhaust pipe cap (1) from the breather tube and drain deposits into a suitable container.
2. Replace the crankcase exhaust pipe cap.

Service more frequently when riding in rain, at full throttle, or after the motorcycle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.

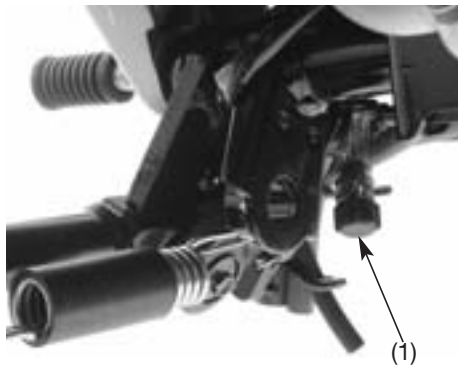

(1) Exhaust pipe cap