

5. After installing the wheel, apply the brakes several times, then recheck the disc for caliper holder (not brake pads) to disc clearance. Do not operate the motorcycle without adequate clearance.
- Check for free wheel rotation after the brake lever is released. Recheck the wheel if the brake drags or if the wheel does not rotate freely.
 - Verify proper brake operation before riding.

Failure to leave a suitable gap between the caliper (not the brake pads) and the disc, may damage the brake disc and adversely affect stopping performance.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.