


ABS type fuse box:

The ABS fuse box (1) is located behind the right side cover on the metal battery holder bracket. The fuses specified are as follows:

10A - 30A CBF500A

1. Remove the right side cover (page 47).
2. Lift the main ABS fuse box cover (1) to check 30A fuses.
3. Lift the secondary ABS fuse box cover (2) to check the 10A fuse.
4. Extract the fuse. If the fuse is burnt out, fit a replacement. The replacement 30A fuse (3) is located inside the main fuse box; the 10A fuse is in the fuse box underneath the passenger seat.
5. Close the fuse box cover.

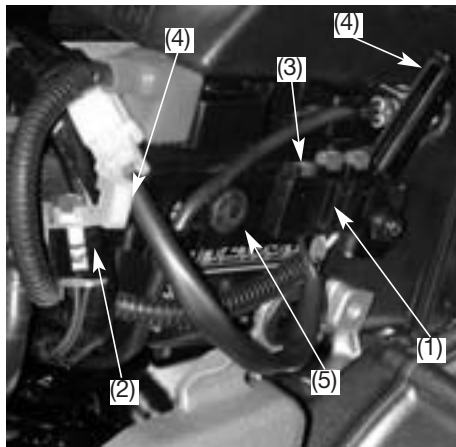

- (1) ABS main fuse box
- (2) ABS secondary fuse box
- (3) Replacement 30A fuse
- (4) Cover
- (5) Metal battery holder bracket