- Remove the battery. Store in an area protected from freezing temperatures and direct sunlight.
 - Check the electrolyte level and slow charge the battery once a month.
- Wash and dry the motorcycle. Wax all painted surfaces. Coat chrome with rustinhibiting oil.
- 8. Inflate the tyres to their recommended pressures. Place the motorcycle on blocks to raise both tyres off the ground.
- Cover the motorcycle (don't use plastic or other coated materials) and store in an unheated area, free of dampness with a minimum of daily temperature variation. Do not store the motorcycle in direct sunlight.

REMOVAL FROM STORAGE

- 1. Uncover and clean the motorcycle. Change the engine oil if more than 4 months have passed since the start of storage.
- Check the battery electrolyte level and charge the battery as required. Install the battery.
- Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh petrol.
- 4. Perform all Pre-ride Inspection checks (page 40). Test ride the motorcycle at low speeds in a safe riding area away from traffic.