

ITEM	FREQUENCY	WHICHEVER →	ODOMETER READING [NOTE(1)]								REFER TO PAGE	
			COMES FIRST ↓	x1,000km	1	6	12	18	24	30		36
				x1,000mi	0.6	4	8	12	16	20		24
			NOTE	MONTH		6	12	18	24	30		36
	DRIVE CHAIN			I, L, EVERY 1,000 km (600 mi)								66-70
	BATTERY			I	I	I	I	I	I	I	81-83	
	BRAKE FLUID	(NOTE 4)			I	I	R	I	I	R	18-21	
	BRAKE PAD WEAR				I	I	I	I	I	I	80	
	BRAKE SYSTEM			I		I		I		I	18-21	
*	BRAKE LIGHT SWITCH					I		I		I	86	
*	HEADLIGHT AIM					I		I		I	-	
	CLUTCH SYSTEM					I		I		I	22	
	CLUTCH FLUID	(NOTE 4)			I	I	R	I	I	R	22	
	SIDE STAND					I		I		I	72	
*	SUSPENSION					I		I		I	71	
*	NUTS, BOLTS, FASTENERS				I		I	I		I	-	
**	WHEELS/TYRES					I		I		I	-	
**	STEERING HEAD BEARINGS				I		I		I	I	-	

\* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

- NOTES:
1. At higher odometer readings, repeat at the frequency interval established here.
  2. Service more frequently when riding in unusually wet or dusty areas.
  3. Service more frequently when riding in rain or at full throttle.
  4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
  5. Switzerland and Austria type only.