


## BATTERY

(Refer to the maintenance precautions on page 54).

If the motorcycle is operated with insufficient battery electrolyte, sulfation and battery plate damage will occur.

If rapid loss of electrolyte is experienced, or if your battery seems to be weak, causing slow starting or other electrical problems, see your authorized Honda dealer.

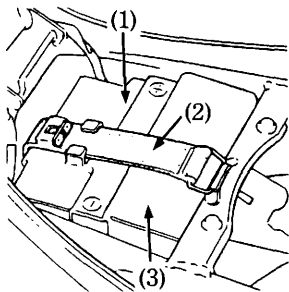

(1) Battery  
(2) Strap

(3) Cover

## Battery electrolyte :

The battery (1) is under the seat. Unhook the strap (2) and remove the battery cover (3).

Remove the tool kit and pull back the separator (4).

Check the electrolyte level with the motorcycle on its center stand on level ground. The electrolyte level must be maintained between the UPPER (5) and LOWER (6) level marks on the side of the battery.