

Installation Notes :

To install the front wheel assembly, position the wheel between the fork legs. Insert the front axle from the left side, through the left front fork leg and wheel hub.

CAUTION:

*** When installing the wheel carefully, fit the brake disc between the brake pads to avoid damaging the pads.**

Tighten the axle bolt to the specified torque.

Front axle torque :

59 N·m (5.9 kg-m , 43 lb-ft)

Fit the caliper over the disc, taking care not to damage the brake pads. Install the caliper fixing bolts and tighten to a torque of:

27 N·m (2.7 kg-m , 20 lb-ft)

Hex bolts (4),(5) torque :

27 N·m (2.7 kg-m , 20 lb-ft)

CAUTION:

*** After installation, operate the brake lever and brake pedal and check the brake operation.**