

Installation Notes:


- To install the rear wheel, reverse the removal procedure.
- Make sure that the lug (6) on the brake caliper is located in the slot (7) in the swingarm (8).
- Tighten the axle nut to:
93 N·m (9.3 kg-m , 67 lb-ft)
- Adjust the drive chain (Page 72).
- Apply the brake several times and check for free wheel rotation after the brake pedal is released.
- Brake system inspection (See page 89)

CAUTION:

- * **When installing the wheel carefully, fit the brake disc between the brake pads to avoid damaging the pads.**
- * **After installation, operate the brake lever and brake pedal and check the brake operation.**

▲ WARNING

- * **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

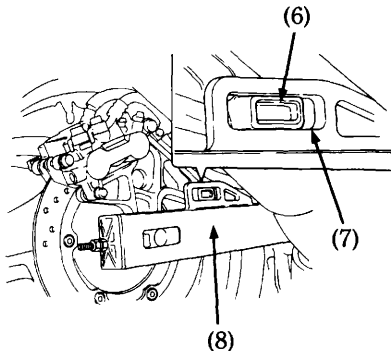

(6) Lug
(7) Slot

(8) Swing arm