

SEAT


To remove the seat (1), insert the ignition key (2) into the helmet holder (3) turn it counterclockwise.

Remove the seat by pulling up and rearward.

To install the seat, insert the prong A (4) into the recess A (5) and set the prong B (6) against the fuel tank (7). Then set the hook (8) against the recess B (9). Push the rear of the seat down to lock the seat.

CAUTION:

*** Be sure the seat is locked securely in position after installation.**

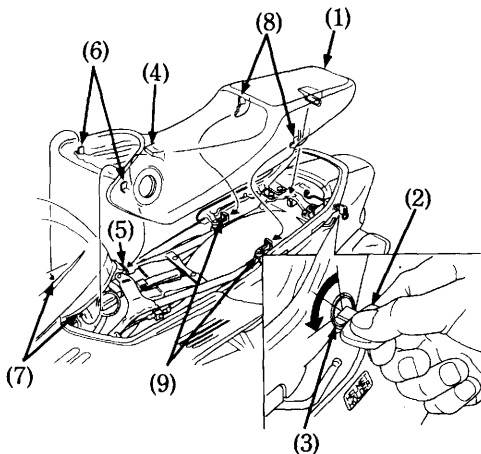

- | | |
|------------------|-------------------|
| (1) Seat | (3) Helmet holder |
| (2) Ignition key | (5) Recess A |
| (4) Prong A | (6) Prong B |
| (7) Fuel tank | (8) Hook |
| | (9) Recess B |