

SPARK PLUGS


(Refer to the maintenance precautions on page 60).

Recommended plugs:

Standard:

DPR9EA-9 (NGK) or
X27EPR-U9 (NIPPONDENSO)

1. Remove the seat (see page 38).
2. Remove the fuel tank front mount bolts (1) and washer (2).

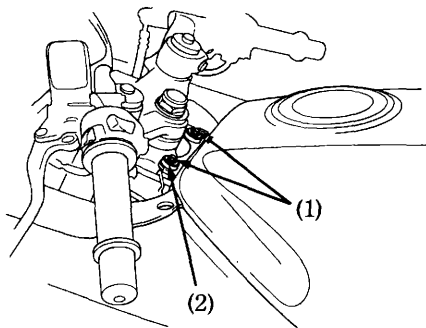

(1) Mount bolts

(2) Washer