

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]									REFER TO PAGE
			× 1,000 km	1	6	12	18	24	30	36		
			× 1,000 mi	0.6	4	8	12	16	20	24		
* FUEL LINE					I		I		I		—	
* THROTTLE OPERATION					I		I		I		101	
* AIR CLEANER		NOTE (2)					R			R	—	
* SPARK PLUGS			EVERY 24,000 km (16,000 mi) I, EVERY 48,000 km (32,000 mi) R									—
* VALVE CLEARANCE							I				—	
ENGINE OIL			R		R		R		R		97	
ENGINE OIL FILTER			R		R		R		R		98	
* ENGINE IDLE SPEED			I	I	I	I	I	I	I		102	
RADIATOR COOLANT		NOTE (3)			I		I		R		45	
* COOLING SYSTEM					I		I		I		—	
* SECONDARY AIR SUPPLY SYSTEM					I		I		I		—	