



Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Press and hold both the SEL button (1) and RESET button (2) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.

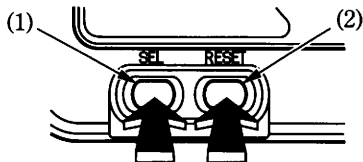

 - (1) SEL button
(2) RESET button



3. To set the hour, press the RESET button until the desired hour appears.
 - Quick setting – press and hold the RESET button until the desired hour appears.
4. Press the SEL button when the display reaches the desired hour appears. The minute display will be flashing.

