	FREQUENCY		WHICHEVER → COMES		ODOMETER READING [NOTE (1)]							
1			FIRST	× 1,000 km	1	6	12	18	24	30	36	REFER
1			. ↓	× 1,000 mi	0.6	4	8	12	16	20	24	TO
n	`EM		NOTE	MONTH		6	12	18	24	30	36	PAGE
	FUEL LINE						I		I		I	
*	THROTTLE OPERATION						I		I		I	106
	AIR CLEANER	<del>-</del>	NOTE (2)					R			R	
	SPARK PLUGS				EVERY 24,000 km (16,000 mi) I, -							
					EVERY 48,000 km (32,000 mi) R							
*	VALVE CLEARANCE								I			
Г	ENGINE OIL				R		R		R		R	101
	ENGINE OIL FILTER				R		R		R		R	103
*	ENGINE IDLE SPEED				I	I	I	I	I	I	I	107
	RADIATOR COOLANT		NOTE (3)				Ī		I		R	45
	COOLING SYSTEM						I		I		I	_
*	SECONDARY AIR SUPPLY	SYSTEM				L	I		I		I	