

<b>(Ref.No.) Description</b>	<b>Function</b>
(12) Multi-function display	The display includes the following functions;
Odometer	Shows accumulated mileage (page 29 ).
Tripmeter	Shows mileage per trip (page 29 ).
Fuel mileage meter	Shows current fuel mileage, average fuel mileage, or fuel consumption. See pages 31 – 33 . When the low fuel indicator comes on, the display is changed to the reserve fuel consumption (page 23 ).
(13) Immobilizer system (HISS) indicator (red)	This indicator lights for a few seconds when the ignition switch is turned ON. It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 68 ). When the blinking function of this indicator is valid and the ignition switch is OFF, it keeps blinking for 24 hours (page 69 ).