

Fuel Mileage Meter

The fuel mileage meter includes the following functions:


- Current fuel mileage
- Average fuel mileage
- Fuel consumption

The indication mode of the current and average fuel mileage can be selected km/l and l/100 km (page 35).

< E type only >

The unit of the indication depends on the unit which you set up (page 34).

When the odometer (5) or tripmeter A (6) is displayed, press control button B (7) to select any mode of the fuel mileage meter. Press control button A (8) to change the indication to the odometer or tripmeter A.

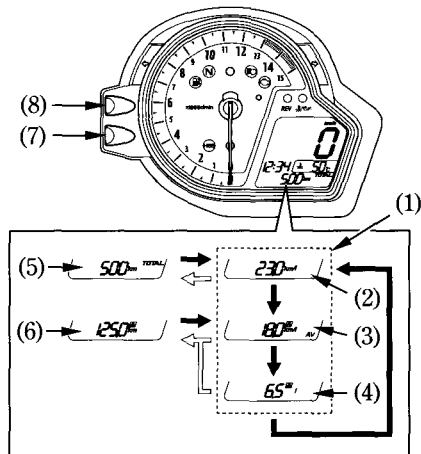

⇨ : Press control button A

➔ : Press control button B

- | | |
|--------------------------|----------------------|
| (1) Fuel mileage meter | (5) Odometer |
| (2) Current fuel mileage | (6) Tripmeter A |
| (3) Average fuel mileage | (7) Control button B |
| (4) Fuel consumption | (8) Control button A |