

## ENGINE OIL

### Engine Oil Level Check

Check the engine oil level each day before riding the motorcycle.


The level must be maintained between the upper (1) and lower (2) level marks on the dipstick (3).

1. Start the engine and let it idle for 3–5 minutes. Make sure the low oil pressure indicator goes off. If the indicator light remains on, stop the engine immediately.
2. Stop the engine and hold the motorcycle in an upright position on firm, level ground.
3. After 2–3 minutes, remove the dipstick, wipe it clean, and reinsert the dipstick without screwing it in. Remove the dipstick. The oil level should be between the upper and lower marks on the dipstick.

4. If required, remove the oil filler cap (4) and add the specified oil (page104) up to the upper level mark. Do not overfill.
5. Reinstall the dipstick and oil filler cap. Check for oil leaks.

#### NOTICE

Running the engine with insufficient oil pressure may cause serious engine damage.

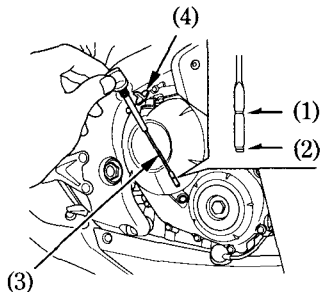

- |                      |                    |
|----------------------|--------------------|
| (1) Upper level mark | (3) Dipstick       |
| (2) Lower level mark | (4) Oil filler cap |