

Rear seat


The rear seat (1) must be removed to access the tool kit and owner's manual.

To Remove the Rear Seat:

1. Move the seat belt (2) forward.
2. Insert the ignition key (3) into the seat lock (4). Turn it clockwise, then pull the rear seat up and forward.

Installation:

1. To install the seat, insert the prong (5) into the seat hook (6), and then push down on the front of the seat.
 2. Put back the seat belt.
- Be sure the seat is locked securely in position after installation.

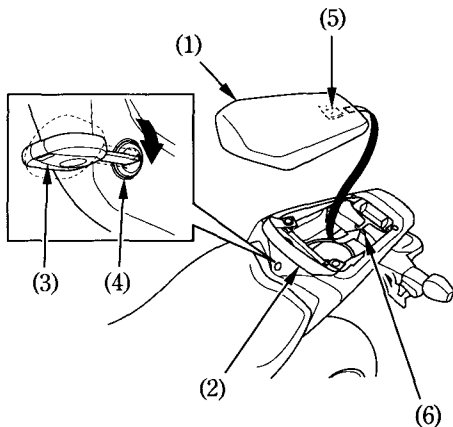

- (1) Rear seat
- (2) Seat belt
- (3) Ignition key

- (4) Seat lock
- (5) Prong
- (6) Seat hook