

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
* FUEL LINE					I		I		I	—	
* THROTTLE OPERATION					I		I		I	110	
* AIR CLEANER		NOTE (2)					I		I	—	
* SPARK PLUGS					EVERY 24,000 km (16,000 mi) I, EVERY 48,000 km (32,000 mi) R					—	
* VALVE CLEARANCE								I		—	
ENGINE OIL				R		R		R		104	
ENGINE OIL FILTER				R		R		R		106	
RADIATOR COOLANT		NOTE (3)			I		I		R	53	
* COOLING SYSTEM					I		I		I	111	
* SECONDARY AIR SUPPLY SYSTEM						I		I	I	—	