


## Speedometer/Odometer/Tripmeter/ Fuel Mileage Meter/Speed, Mileage and Fuel Mileage Unit Change

### To change the indication:

Change the indication between the odometer (1), the tripmeter (2), and the fuel mileage meter (3) by pressing control button A (4) or B (5).

The fuel mileage meter includes the following functions:

- Current fuel mileage
- Average fuel mileage
- Fuel consumption

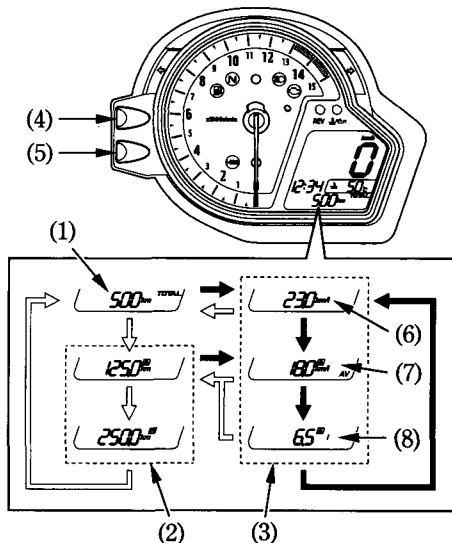

- ⇨ :Press control button A
- ➔ :Press control button B

- (1) Odometer
- (2) Tripmeter
- (3) Fuel mileage meter
- (4) Control button A
- (5) Control button B
- (6) Current fuel mileage
- (7) Average fuel mileage
- (8) Fuel consumption