


## SEAT

To remove the seat (1), insert the ignition key (2) into the seat lock (3) and turn it clockwise. Pull the seat back and up.

To install the seat, insert the front prong (4) into the fuel tank stay (5) and the rear prongs (6) into the rear stay (7) on the frame and then push down on the rear of the seat.

Be sure the seat is locked securely in position after installation.

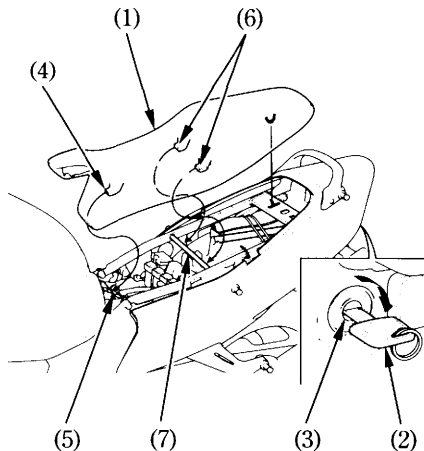

- |                  |                    |
|------------------|--------------------|
| (1) Seat         | (5) Fuel tank stay |
| (2) Ignition key | (6) Rear prongs    |
| (3) Seat lock    | (7) Rear stay      |
| (4) Front prong  |                    |