

UPPER COWL COVER


The right and left upper cowl covers can be removed in the same manner.

Removal:

1. Remove the nut (1) and long mount bolt (2).
2. Remove the short mount bolt (3).
3. Remove the clip (4).
4. Remove the upper cowl cover (5).

Installation:

- Installation can be done in the reverse order of removal.

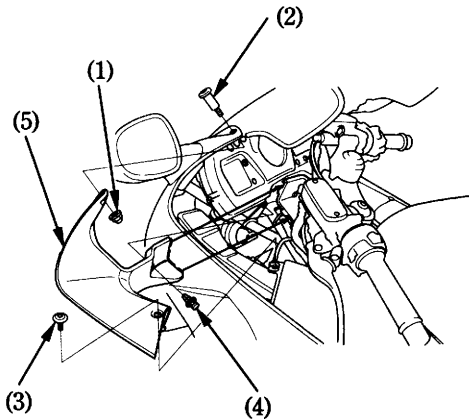

- | | |
|----------------------|----------------------|
| (1) Nut | (4) Clip |
| (2) Long mount bolt | (5) Upper cowl cover |
| (3) Short mount bolt | |