


Headlight Bulb

1. Remove the upper cowl cover (page 59).
2. Pull out the socket (1) without turning.
3. Remove the dust cover (2).
4. Remove the bulb (3) while pressing down on the pin (4).
5. Pull out the bulb without turning.
6. Install a new bulb in the reverse order of removal.
 - Install the dust cover with its "TOP" mark (5) facing up.

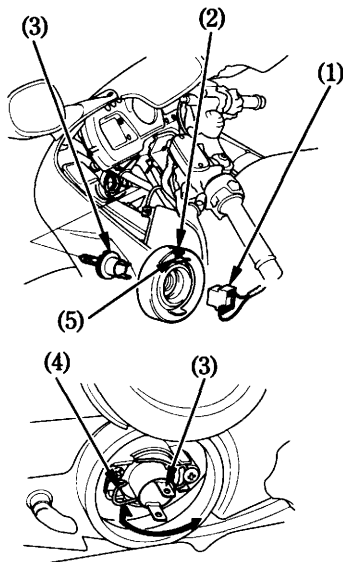

- | | |
|----------------|----------------|
| (1) Socket | (3) Bulb |
| (2) Dust cover | (4) Pin |
| | (5) "TOP" mark |