


Adjust the free play by loosening the lock nut and turning the adjusting nut.  
 After adjustment, tighten the lock nut securely.  
 Recheck the throttle operation.  
 Replace any damaged parts, if necessary.

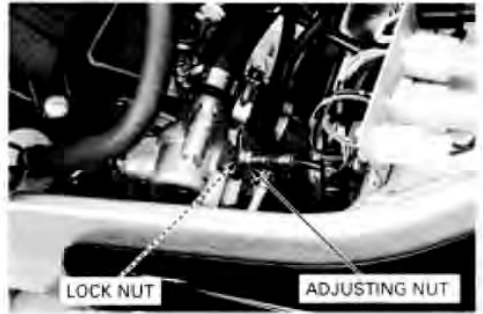


## **CARBURETOR CHOKE**

This model's choke system uses a fuel enriching circuit controlled by a starting enrichment (SE) valve. The SE valve opens the enriching circuit via a cable when the choke knob on the fork top bridge is pulled.

Check for smooth choke knob operation and lubricate the choke cable if required.

Inspect the cable for cracks which could allow moisture to enter.

Replace the cable if necessary.

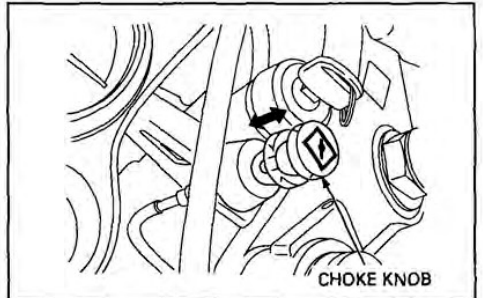

## **AIR CLEANER**

Remove the fuel tank (page 5-3).

Remove the five screws and air cleaner housing cover.



Remove and clean the air cleaner element in accordance with the maintenance schedule.

Also replace the air cleaner element any time it is excessively dirty or damaged.

