


OIL PUMP

REMOVAL


Drain the engine oil (page 3-11).

Remove the right crankcase cover (page 8-3)

Remove the three bolts and oil pump assembly.

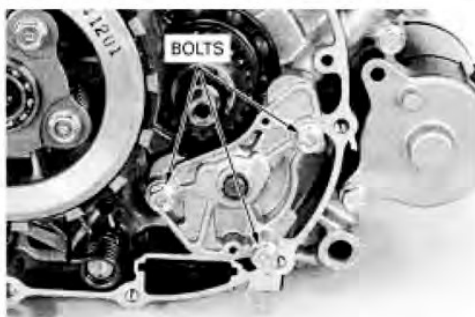

Remove the dowel pins.

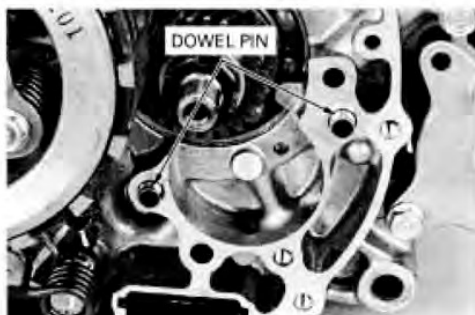

DISASSEMBLY

Remove the E-clip.



Remove the oil pump shaft and gear.
Remove the two bolts and oil pump cover.

