

## LUBRICATION SYSTEM

---

Install and tighten the three bolts securely.

Clean the oil strainer screen (page 3-12).

Install the right crankcase cover (page 8-14)

After installation, fill the crankcase with recommended oil (page 3-10) and check that there are no oil leaks.

