

## FUEL TANK


### REMOVAL/INSTALLATION

Remove the driver seat (page 2-2).

Remove the bolt and collar.

Raise the rear of fuel tank while releasing the bosses of the rear cowl from the grommets of the fuel tank.

Pull the fuel tank backward and support it.

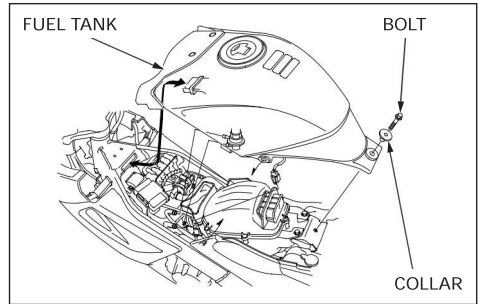


Disconnect the fuel unit 3P connector.



Disconnect the fuel and vacuum tube from the fuel auto valve.

Installation is in the reverse order of removal.

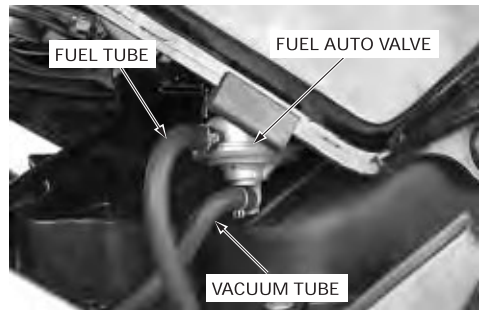

### FUEL AUTO VALVE INSPECTION

Remove the fuel tank (See above).

Connect a commercially available vacuum pump to the diaphragm vacuum outlet.

Fuel should flow out from the fuel tube when vacuum is applied.

If fuel flow is restricted, replace the fuel auto valve.

