


Loosen the throttle cable adjusting nut and disconnect the throttle cable end from the throttle drum.



Loosen the nut and remove the starting enrichment (SE) valve and washer from the carburetor body.

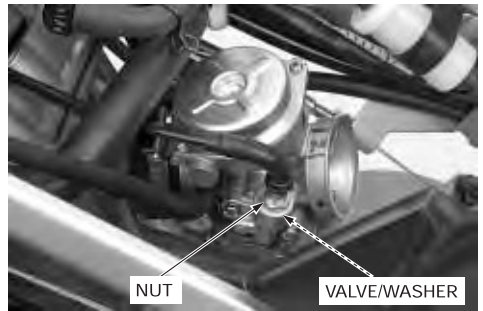

Loosen the insulator band screw.
Remove the carburetor.



Disconnect the fuel, air vent and drain tubes.

