

Install the washer and impeller to the shaft.



Hold the water pump shaft and tighten the impeller to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m , 7 lbf·ft)

Install the following:

- right crankcase cover (page 8-14)
- water pump cover (page 6-12)

Fill and bleed the cooling system (page 6-5).
Fill the engine oil (page 3-10).

