


**RIGHT CRANKCASE COVER REMOVAL**

Drain the engine oil (page 3-11).

Drain the coolant (page 6-5).

Disconnect the clutch cable end from the clutch lifter arm.

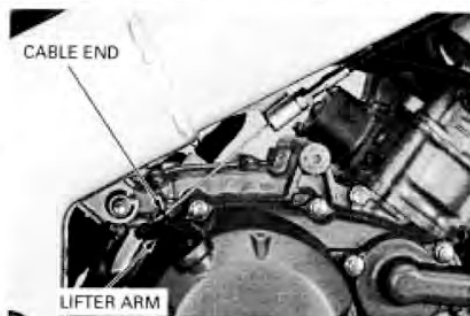

Loosen the hose band screws and disconnect the radiator hoses.



Remove the ten bolts, clamp and right crankcase cover.



Remove the gasket and dowel pins.

