

## CYLINDER HEAD REMOVAL


### CYLINDER HEAD COVER REMOVAL

Remove the following:

- right and left middle cowl (page 2-4)
- fuel tank (page 5-3)

Remove the two bolts and radiator with water hoses installed.


Disconnect the upper radiator hose from the cylinder head.

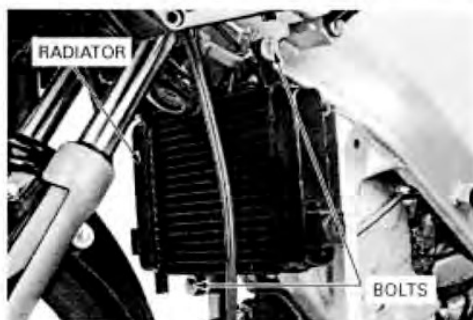

Disconnect the vacuum tube.

Remove the bolt and PAIR control valve.

Disconnect the air injection hose from the PAIR check valve cover.

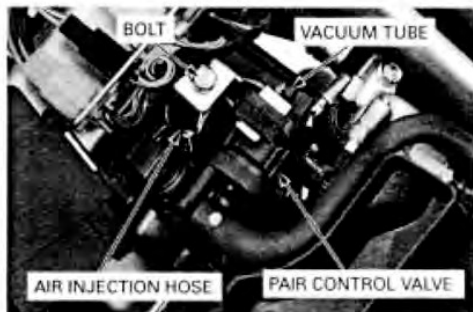

Remove the two bolts and rubber washers.



Remove the cylinder head cover, gasket, dowel pin and O-ring.

