

TRANSMISSION

TOOLS

Bearing remover head, 15 mm	07936 – KC10200
Bearing remover shaft	07936 – KC10100
Bearing remover weight	07741 – 0010201
Driver	07749 – 0010000
Attachment, 37 x 40 mm	07746 – 0010200
Attachment, 42 x 47 mm	07746 – 0010300
Attachment, 32 x 35 mm	07746 – 0010100
Pilot, 17 mm	07746 – 0040400
Pilot, 15 mm	07746 – 0040300
Pilot, 20 mm	07746 – 0040500
Pilot, 12 mm	07746 – 0040200
Bearing remover head, 12 mm	07936 – 1660110
Bearing remover shaft	07936 – 1660120
Bearing remover weight	07741 – 0010201

TROUBLESHOOTING

Excessive noise

- Worn, sized or chipped transmission gear
- Worn or damaged transmission bearing

Hard to shift

- Bent shift fork
- Bent shift fork shaft
- Damaged shift drum guide groove
- Damaged shift fork guide pin

Transmission jumps out of gear

- Worn gear dogs or slots
- Worn shift drum guide groove
- Worn shift fork guide pin
- Worn shift fork groove in gear