

Drive new bearings into the left crankcase with following tools:

TOOLS:

RIGHT CRANKCASE

Mainshaft bearing:

Driver	07749 - 0010000
Attachment, 37 x 40 mm	07746 - 0010200
Pilot, 17 mm	07746 - 0040400

Countershaft bearing:

Driver	07749 - 0010000
Attachment, 32 x 35 mm	07746 - 0010100
Pilot, 15 mm	07746 - 0040300

LEFT CRANKCASE

Mainshaft bearing:

Driver	07749 - 0010000
Attachment, 32 x 35 mm	07746 - 0010100
Pilot, 12 mm	07746 - 0040200


Countershaft bearing:

Driver	07749 - 0010000
Attachment, 42 x 47 mm	07746 - 0010300
Pilot, 20 mm	07746 - 0040500



After installing the bearings, install a new countershaft oil seal.

Check the gearshift spindle oil seal for damage and replace if necessary.

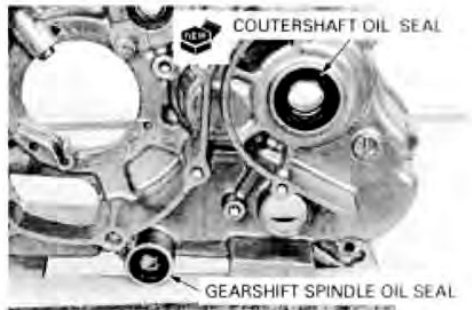

Apply locking agent to the threads of the setting plate bolts, and install the mainshaft bearing setting plate by tightening the bolts.

Lubricate the all bearings with engine oil.

