

Loosen the fork bottom pinch bolts and remove the fork pipe.



DISASSEMBLY

Carefully remove the fork bolt.

▲ WARNING

The fork bolt is under spring pressure. Use care when removing it and wear eye and face protection.



Remove the spring collar, spring seat.

SPRING COLLAR



Remove the fork spring.

Pour out the fork fluid by pumping the fork pipe several times.

SPRING

