


FRONT WHEEL/SUSPENSION/STEERING

Remove the top thread using the special tool.

TOOL:

Steering stem socket

07916 - 3710101

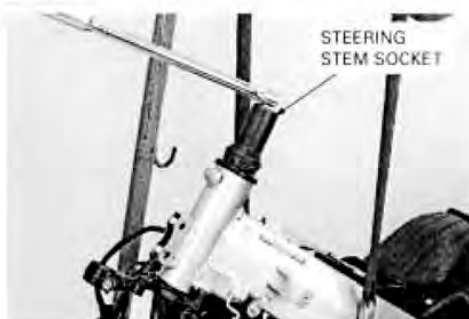

Remove the following:

- top cone race
- upper bearing
- steering stem
- lower bearing

CAUTION:

Be careful not to lose any of the bearing.



BEARING RACE REPLACEMENT

NOTE:

Replace the bearing and races as a set.

Remove the ball races using the special tool.

TOOL:

Ball race remover

07GMD - KS40100



Install the new ball races using the special tools.

TOOLS:

Driver

07749 - 0010000

Attachment, 42 x 47 mm

07746 - 0010300

