

BOTTOM CONE RACE REPLACEMENT

Avoid damaging the steering stem thread, temporarily install the stem nut. Remove the bottom cone race, dust seal and dust seal washer.



Install the new dust seal and bottom cone race. Drive a new bottom cone race onto the steering stem using the special tool.

TOOL:
Steering stem driver 07946 - 4300101



INSTALLATION

